



Stop Button | 6295142

Product Images

Description

Stop button for Powermatic bandsaws. Made of high-quality plastic. This part is a complete switch assembly with housings and is mounted in the body to deactivate the machine. For installation steps and tools, related parts and precautions, refer to your owner's manual and model schematics.

Additional Information

Stock Number	6295142
--------------	---------